

# Keys

## ■ Electronic key




Smart access system with push-button start (→P:16)

Wireless remote control (→P:16)

\*: If equipped

## ■ Mechanical key

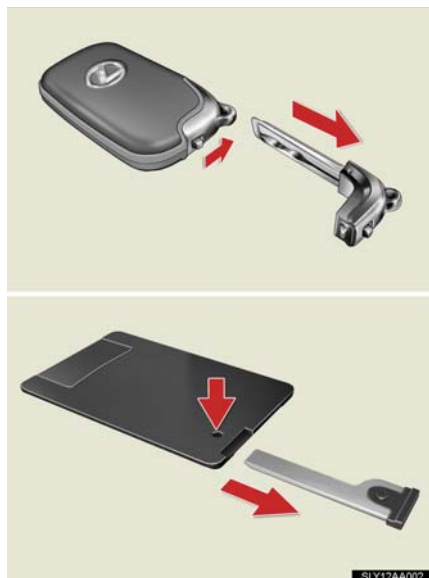

Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

## ■ Wireless remote control




- 1 Locks all the doors
  - 2 Unlocks all the doors  
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
  - 3 Opens the windows (press and hold)\*
  - 4 Sounds the alarm (press and hold)
- \*: This setting must be customized at your Lexus dealer.

## ■ Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. For details on starting the hybrid system, see page 19.

## ■ Entering the vehicle

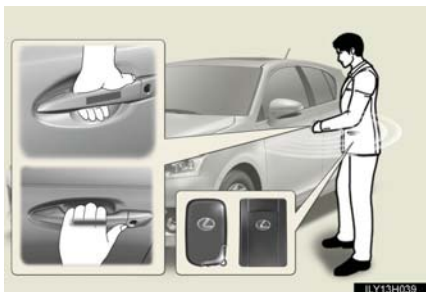


Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

## ■ Exiting the vehicle

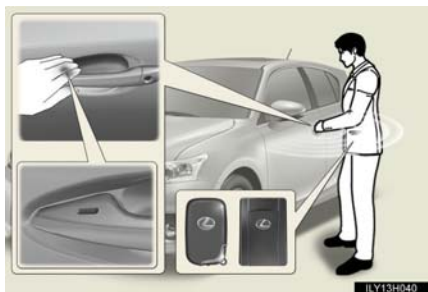


Touch the lock sensor (the indentation on the upper part of the door handle) to lock the doors.

## ■ Unlocking and locking the back door



Press the unlock button to unlock all the doors.

The doors cannot be unlocked for 3 seconds after the doors are locked.

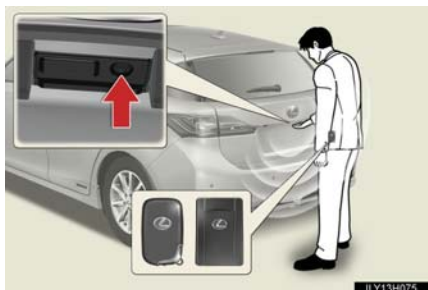

Press the lock button to lock all the doors.

For details on what to do when the electronic key does not operate properly, see page 93.

## Theft Deterrent System

### ■ Immobilizer system



The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

### ■ Alarm

The system sounds the alarm and flashes the lights when forced entry is detected.

**To set the alarm:** Close the doors and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

**To deactivate or stop the alarm:**

- Unlock the doors
- Turn the "POWER" switch to ACCESSORY or ON mode, or start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)